




GB AWO 9765

PROGRAMME CHART

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- A. "Water Tap Closed" indication
- B. "Clean Pump" indication
- C. "Door Locked" indication

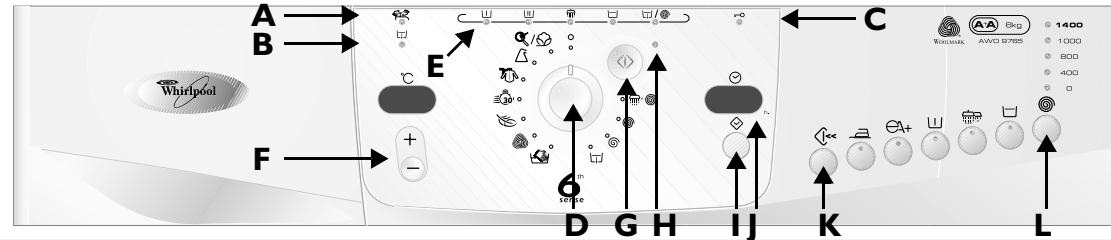

- D. Programme selector knob
 - E. Programme sequence indication
 - F. Temperature selection button
 - G. "Start/Pause" button
 - H. "Start/Pause" indication
 - I. "Start Delay" button
 - J. "Start Delay" indication/ "Remaining Time" display
 - K. "Reset" button
 - L. "Spin Speed" button
- Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

6th sense intelligent technology always guarantees perfect results with maximum efficiency whatever the wash load.

Programme	Care Labels	Type of wash/Notes	Max Load kg	Detergents and additives			Special options						Max Spin Speed rpm	Temperature °C	
				Softener	Main Wash	Pre-wash	Start Delay	Easy Ironing	Eco+	Prewash	Intensive Rinse	Rinse Hold			Spin Speed Reduction
Cotton / Antibacterial		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton, coloured cotton and linen. For temperature selection, please respect the manufacturer's recommendation on the care label. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	6.0	*	Yes	*	*	*	*	*	*	*	*	1400	20 to 95
Synthetics		Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	*	1000 ¹⁾	20 to 60
Daily		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	*	Yes	—	*	*	—	—	*	*	*	1400	30 to 60
Superrapid		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	*	Yes	—	*	*	—	—	*	*	*	1400	20 to 30
Delicates		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	—	—	*	—	*	*	1000 ¹⁾	20 to 40
Wool		Only woollens, labelled with the woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	*	—	—	—	—	*	*	1000 ¹⁾	20 to 40
Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool. <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	*	Yes	—	*	—	—	—	—	*	*	400 ²⁾	20 to 40
Rinse + Spin	—	Same as the last rinse and the final spin in the "Cotton" programme.	6.0	*	—	—	*	*	—	—	*	*	*	1400	—
Spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	6.0	—	—	—	*	—	—	—	—	—	*	1400	—
Gentle Spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	—	*	—	—	—	—	—	*	1000 ¹⁾	—
Drain	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	—	—	—

*: optional / Yes : dosing required
 1) For improved garment care spin speed is restricted to 1000 rpm in this programme.
 2) In this programme default spin speed can be increased till 400 rpm.



CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton / Antibacterial	95	6.0	54**	1.90	2:00
Cotton	60	6.0	49	1.14	2:20
Cotton with "Eco+"***	60	6.0	49	1.02	2:30
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Daily	40	3.0	45	0.50	1:00
Superrapid	30	3.0	37	0.40	0:30
Delicates	30	1.5	60	0.50	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	45	0.30	0:40

Prewash cycle might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme.
2. The **remaining time display** shows the duration of the chosen programme (in hours and minutes) and the indication of the **"Start/Pause"** button is flashing.
3. The **programme sequence** and the predefined **spin speed indication** corresponding to the selected programme lights up.
The recommended temperature (see the indicator) can be altered by pressing "+/-" button.

SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Easy Ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

"Eco+" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption can be achieved.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

"Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
 - This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
 - This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme sequence indication is on.

Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.

- If you do not wish to spin the clothes, turn the programme selector knob counterclockwise to the "Drain" programme and press the **"Start/Pause"** button again when the indication next to it is flashing.

"Spin Speed" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button. The indication next to the "Start Delay" button lights up and goes off when the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

To cancel the "Start Delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to the "Off/0" position.
- Reselect the desired programme and options and press **"Start/Pause"** button to start the programme.

..after having pressed the "Start/Pause" button:

- Press the "Reset" button for at least 3 seconds - the start delay time disappears from the remaining time indication,
- then either start the chosen programme by pressing the **"Start/Pause"** button twice
- or turn the programme selector knob to the "Off/0" position and chose another programme.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication next to the **"Start/Pause"** button lights up. The indications show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding indication goes out.

RED INDICATIONS

"Water Tap Closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

"Clean Pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

"Door Locked"

As long as a washing programme is running, the lamp lights up to show that the door cannot be opened. When the indication goes off, the door can be opened again.

PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "Off/0" position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry out.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.